

EN	SKID PLATE INSTALLATION MANUAL
FR	MANUEL D'INSTALLATION DE PLAQUE DE PROTECTION
DE	MONTAGEEINLEITUNG FÜR UNTERBODENSCHUTZSYSTEM
RU	ИНСТРУКЦИЯ ПО УСТАНОВКЕ КОМПЛЕКТА ЗАЩИТ




For: Polaris Sportsman ACE (2011-)


2444.7433.1

444.7433.1







EN Ratchet
FR Clé À Cliquet
DE Ratsche
RU Трещетка






S - 10;
S - 13

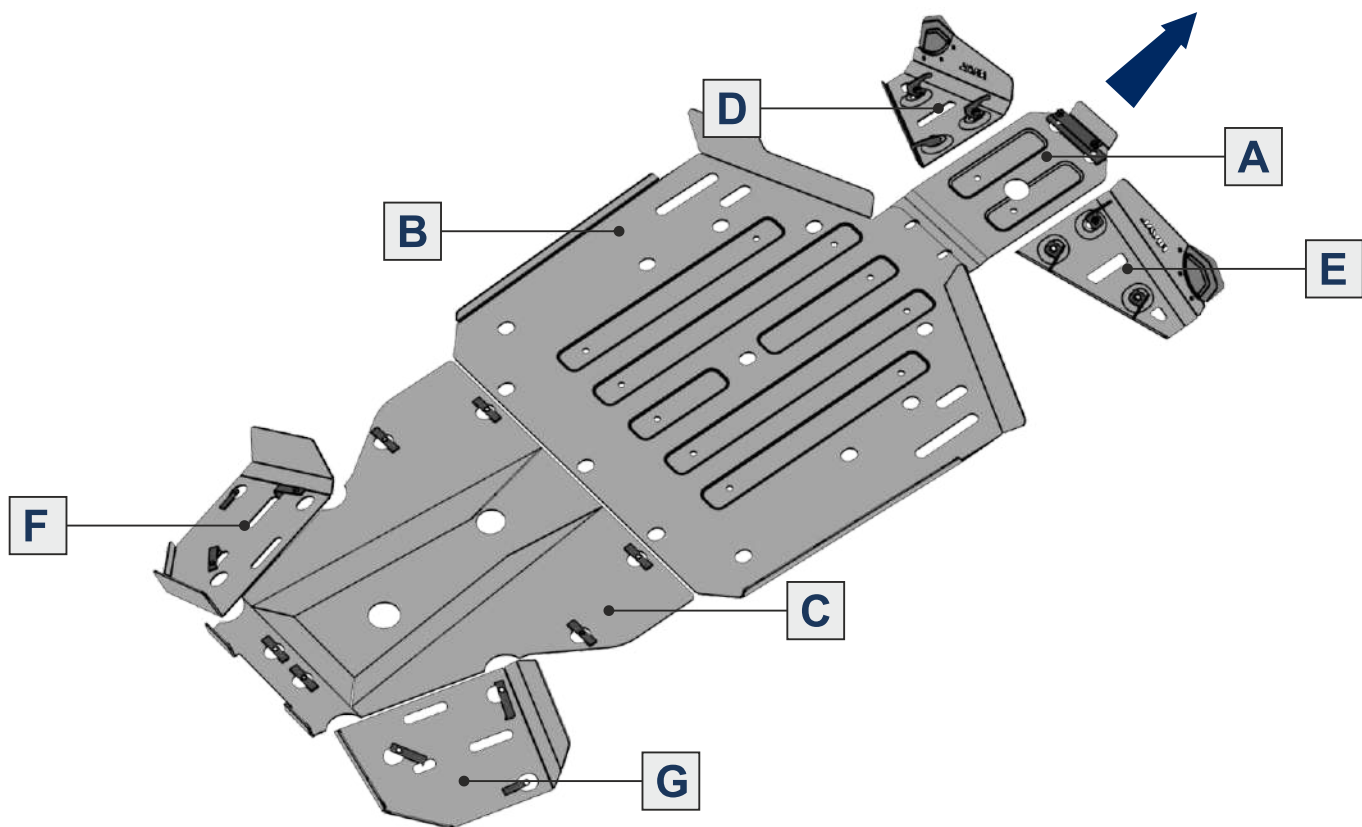


1 x1	2 x1	3 M8 x6	4 M8 x4	5 M8 x2	6 x6
7 M6x25 x14	8 M8x25 x14	9 M8x50 x6	10 Ø 6 x6	11 Ø 8 x6	12 Ø 6 x14
13 Ø 8 x14	14 x6	15 M6 x6	16 Ø 6 x6	17 x1	18 x1

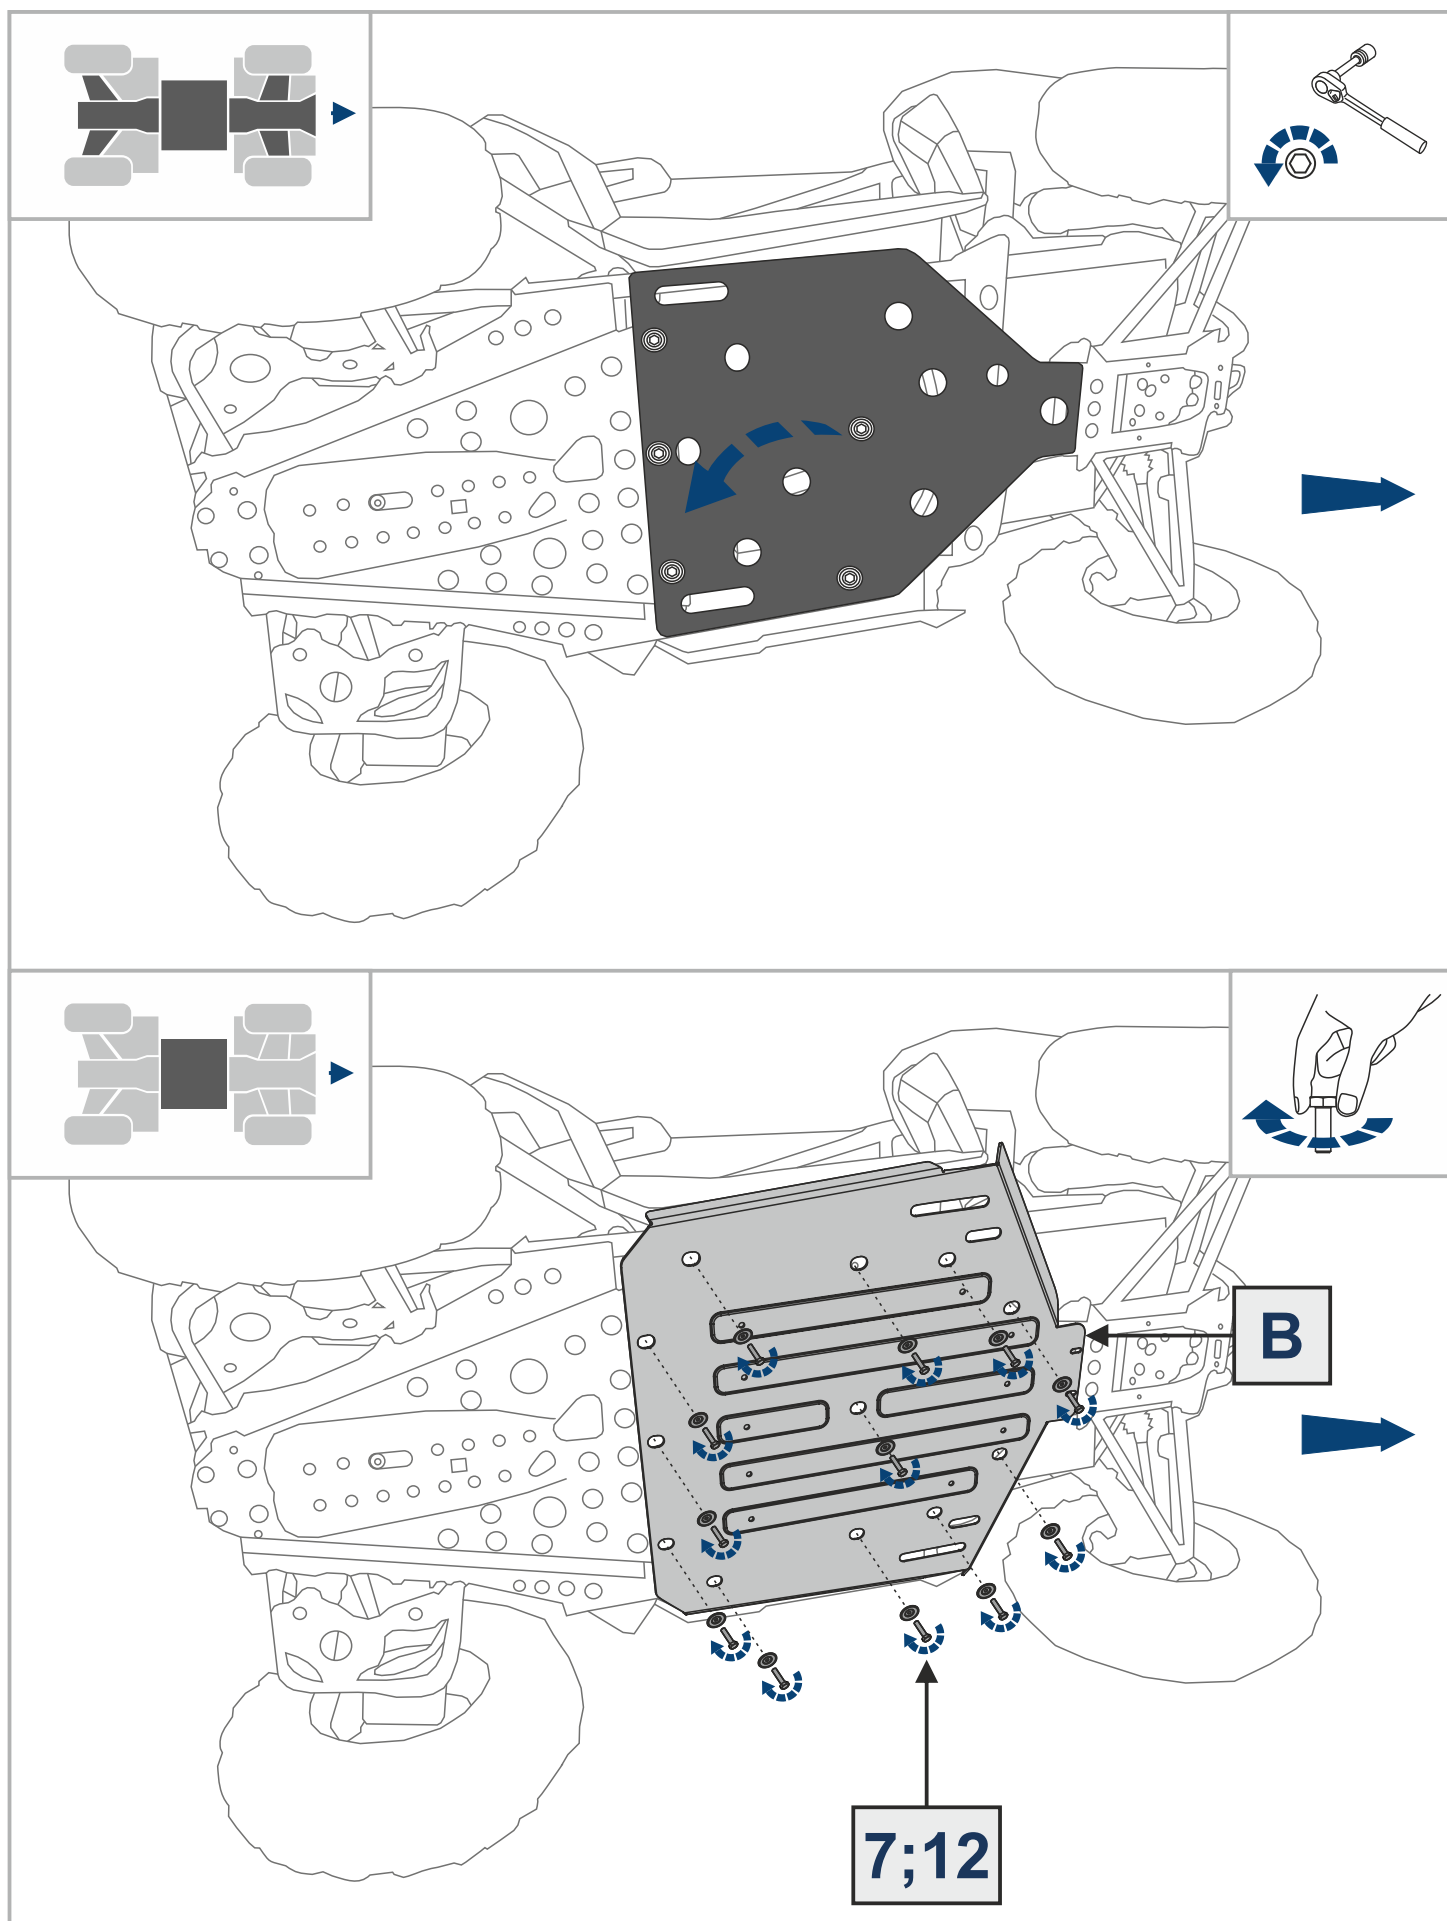

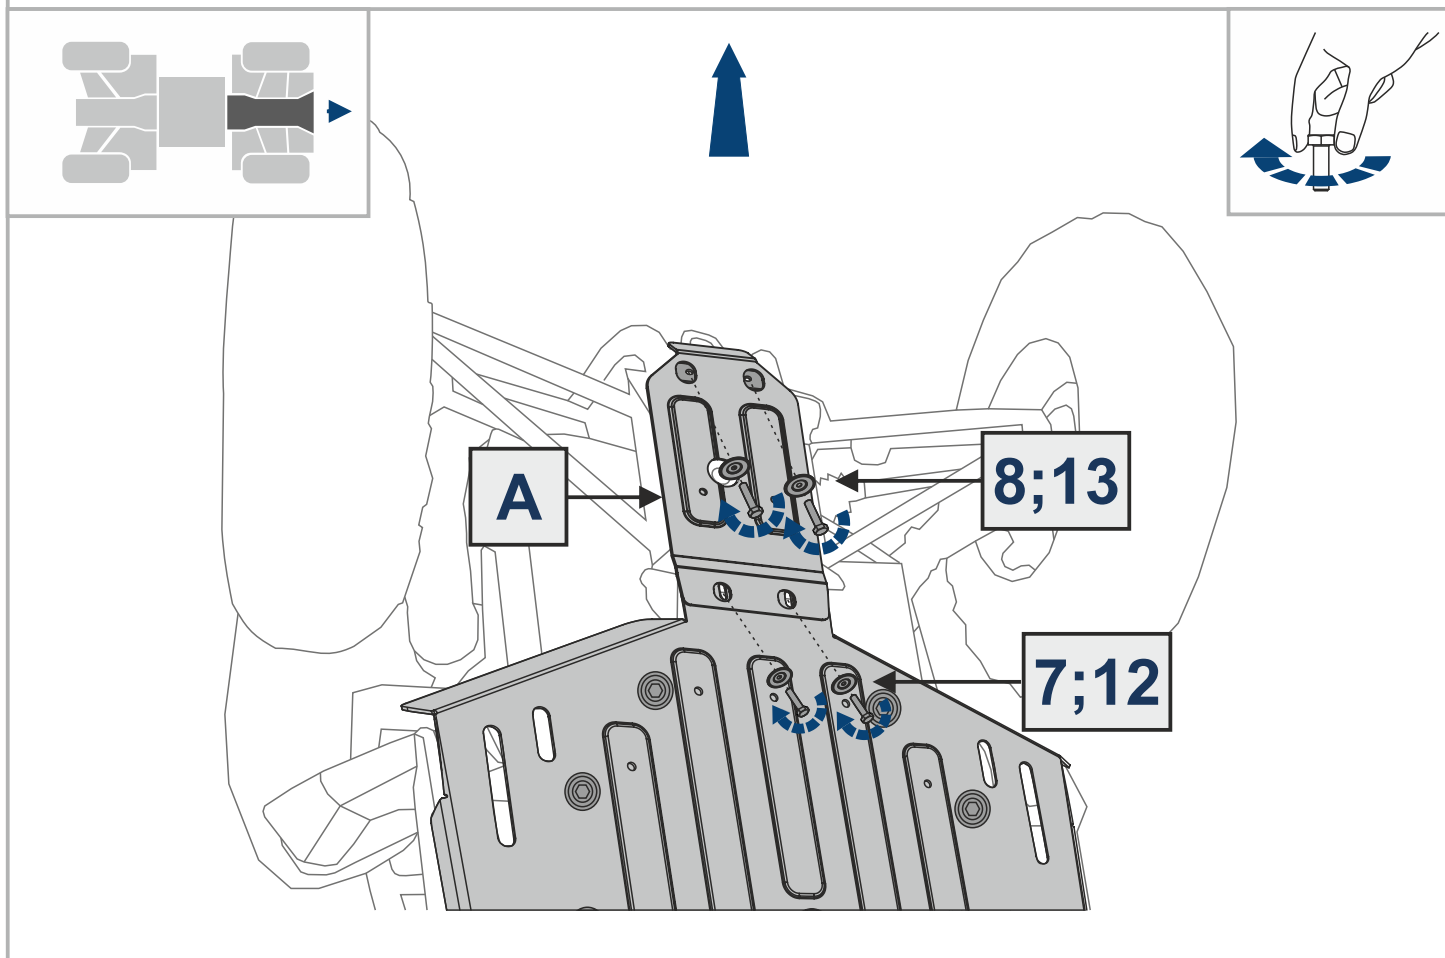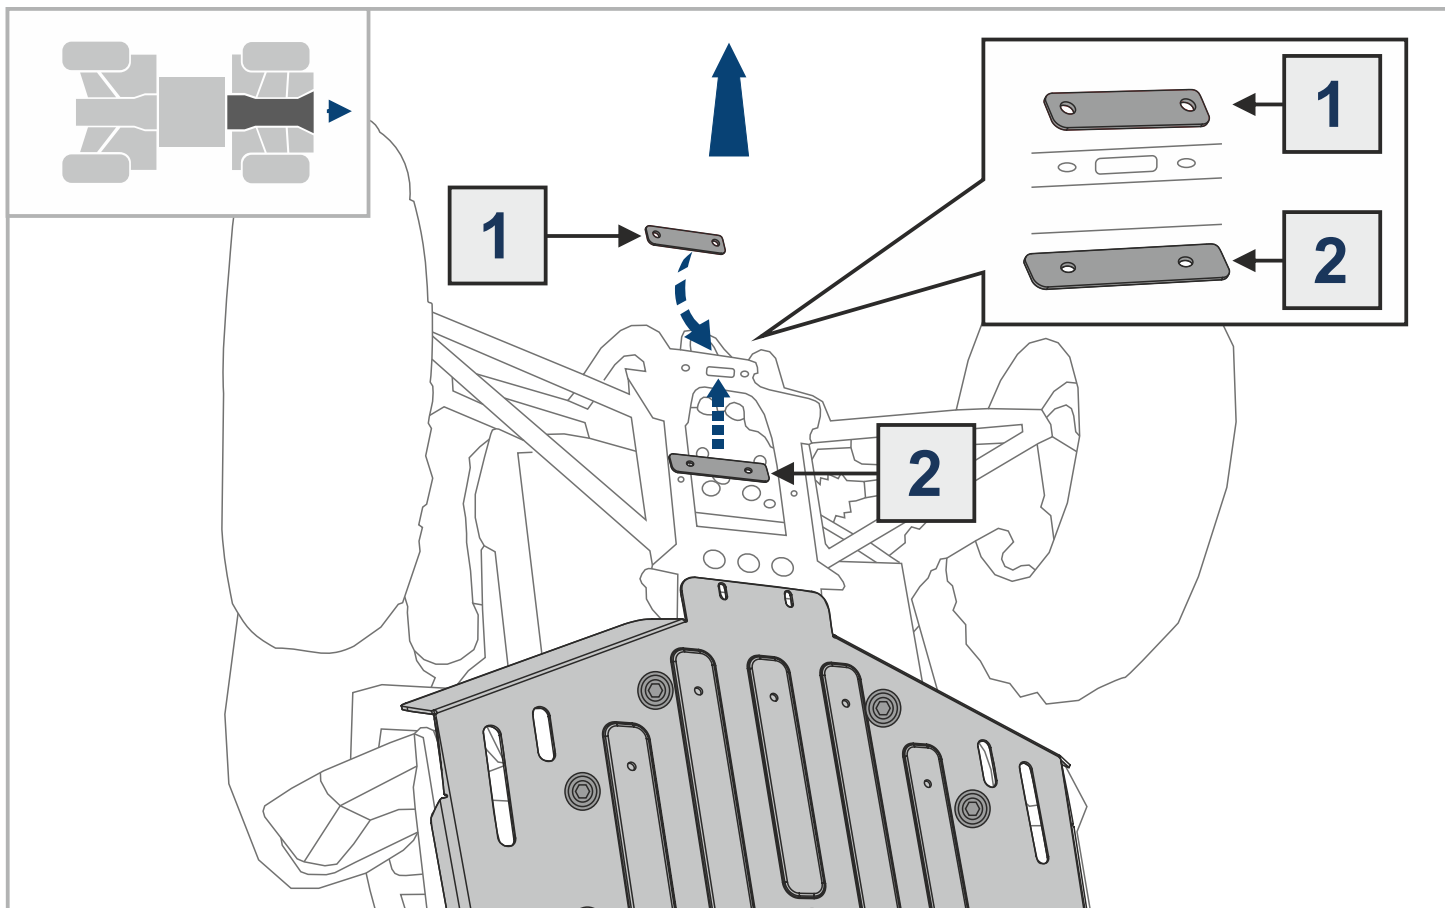


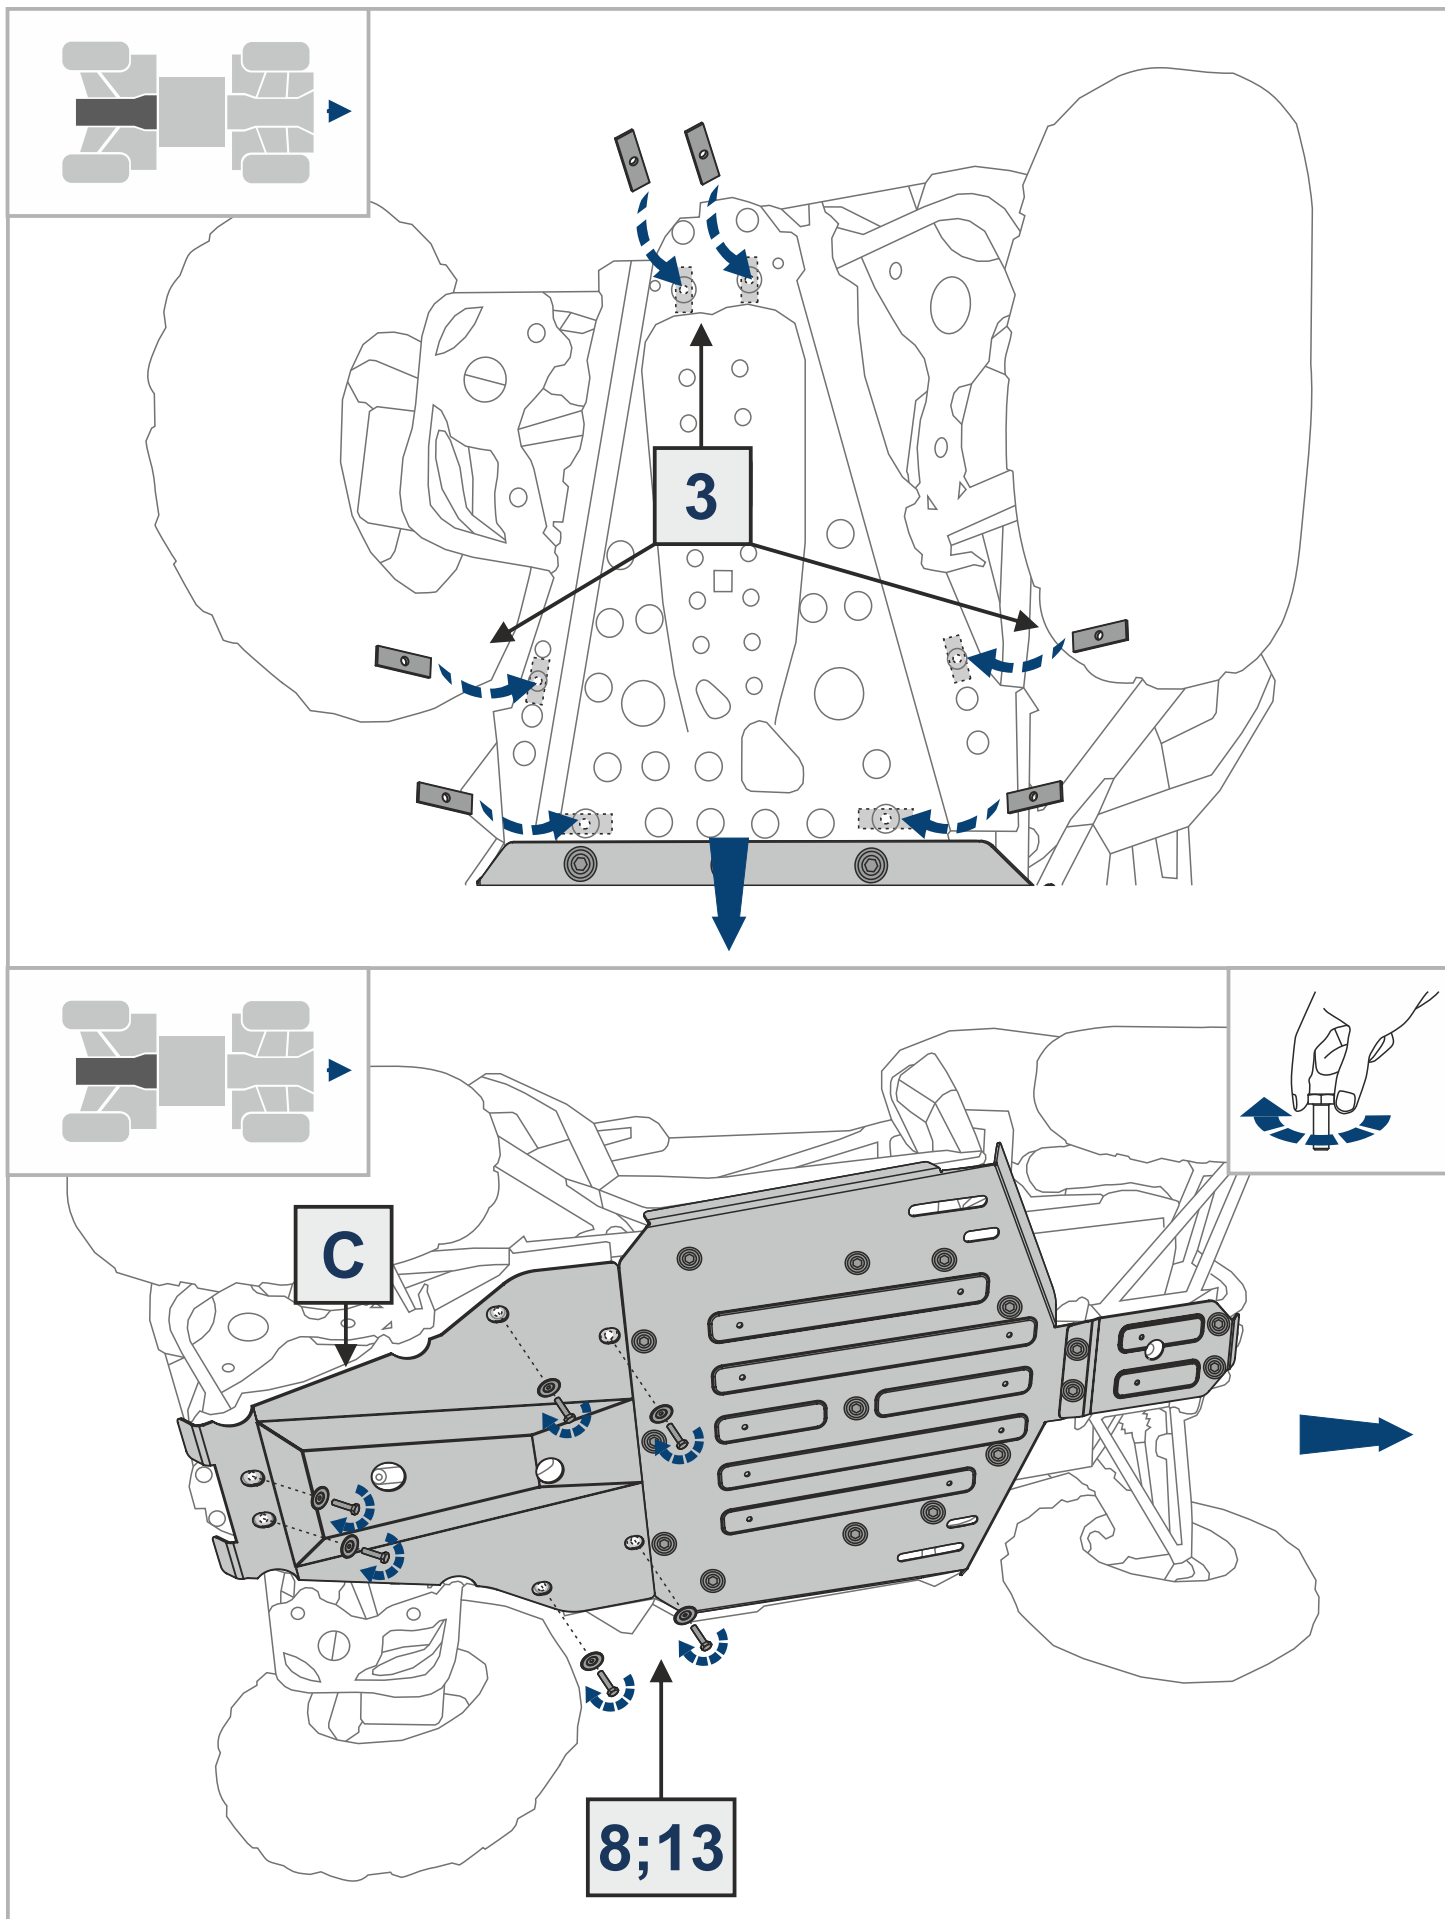


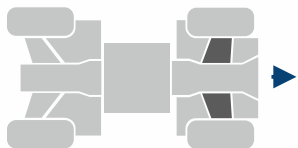

E=D



M6=10Nm

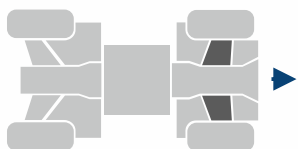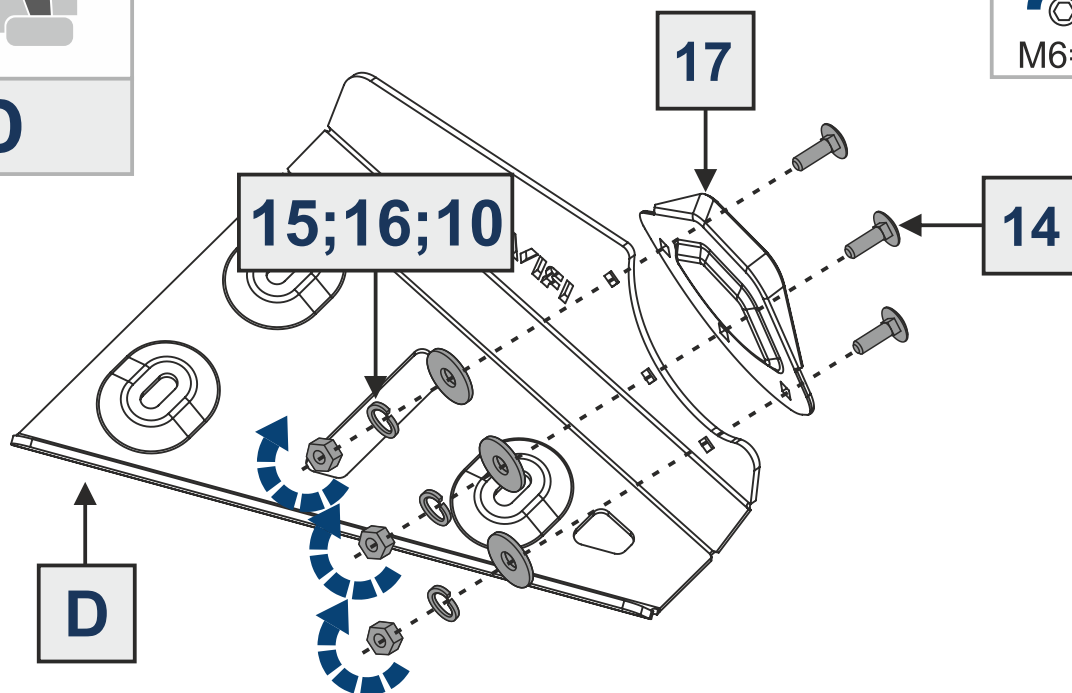

E=D

